


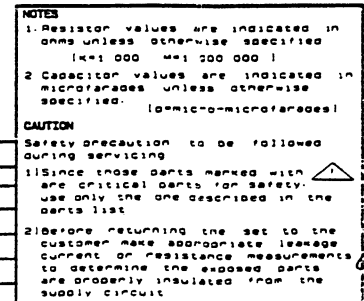


SCHEMATIC DIAGRAM


FOR THE MODEL

AVR41/AVR 50/AVR51

SCHEMATIC DIAGRAM

REVISED			
NO	DATE	NO	DATE
1		6	
2		7	
3		8	
4		9	
5		10	


EQUIPMENT	RECEIVER	MODEL	AVP50/51
DRAW	CHECKED	APPROVED	DATE DRAWING NO
 12/12	 12/14	 1996 12-14	E131- AVP50(16/71) -00-0

 

A B C D E F G H I J K L M

INKEL CAD TEAM			
MODEL NAME	AVR41/51/61	DESIGN	
BOARD NAME	RDS TUNER	INSPECTION	
STEP	W/P	APPROVAL	
SHEET NO.	7/7	DATE	96.12.9

SCHEMATIC DIAGRAM

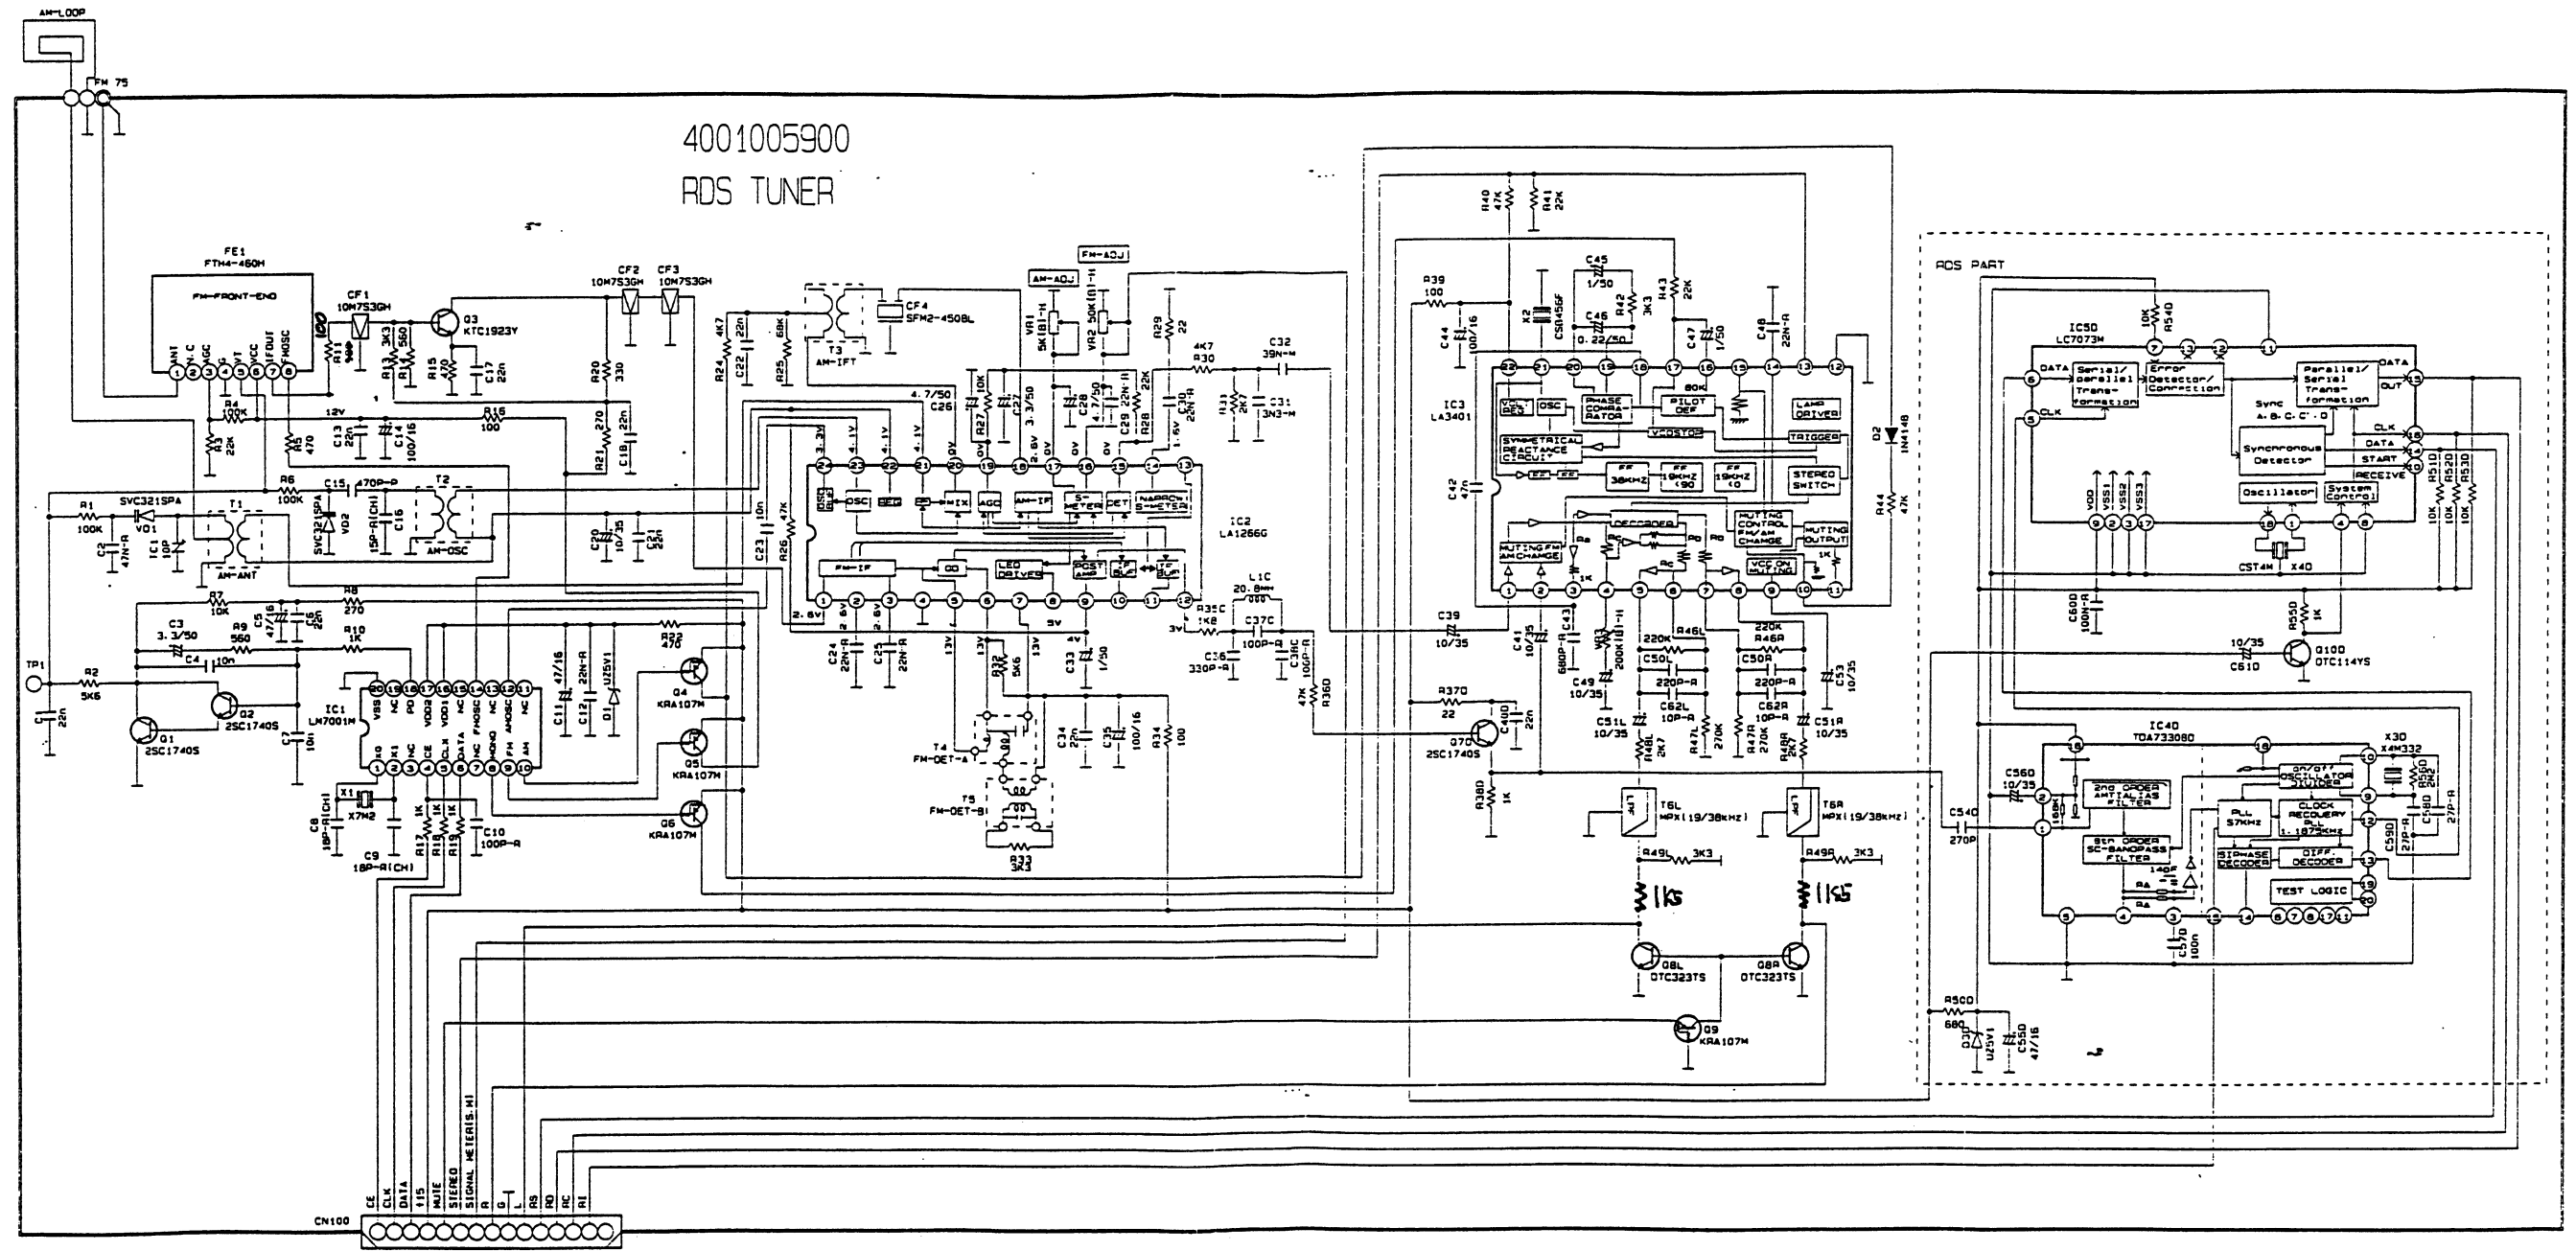

NOTES
1 Resistor values are indicated in ohms unless otherwise specified
[K=1.000 M=1.000.000]
2 Capacitor values are indicated in microfarads unless otherwise specified. [p=micro-microfarads]
CAUTION
Safety precaution to be followed during servicing
1: Since these parts marked with are critical parts for safety use only the one described in the parts list
2: Before returning the set to the customer make appropriate leakage current or resistance measurements to determine the exposed parts are properly insulated from the supply circuit.


REVISED		EQUIPMENT		RECEIVER		MCC...		AVR41/51/61	
NO	DATE	NO	DATE	NO	DATE	NO	DATE	NO	DATE
1		6							
2		7							
3		8							
4		9							
5		10							

12/14 9/14/14 12.14

E131- AVR41 (7/7) -00-C

HAITAI	HAITAI CAD TEAM
MODEL NAME	AVR51
BOARD NAME	FRONT
STEP	4/9
SHEET NO.	1/7
DESIGN	INSPECTION
APPROVAL	DATE
95.12.9	

SCHEMATIC DIAGRAM

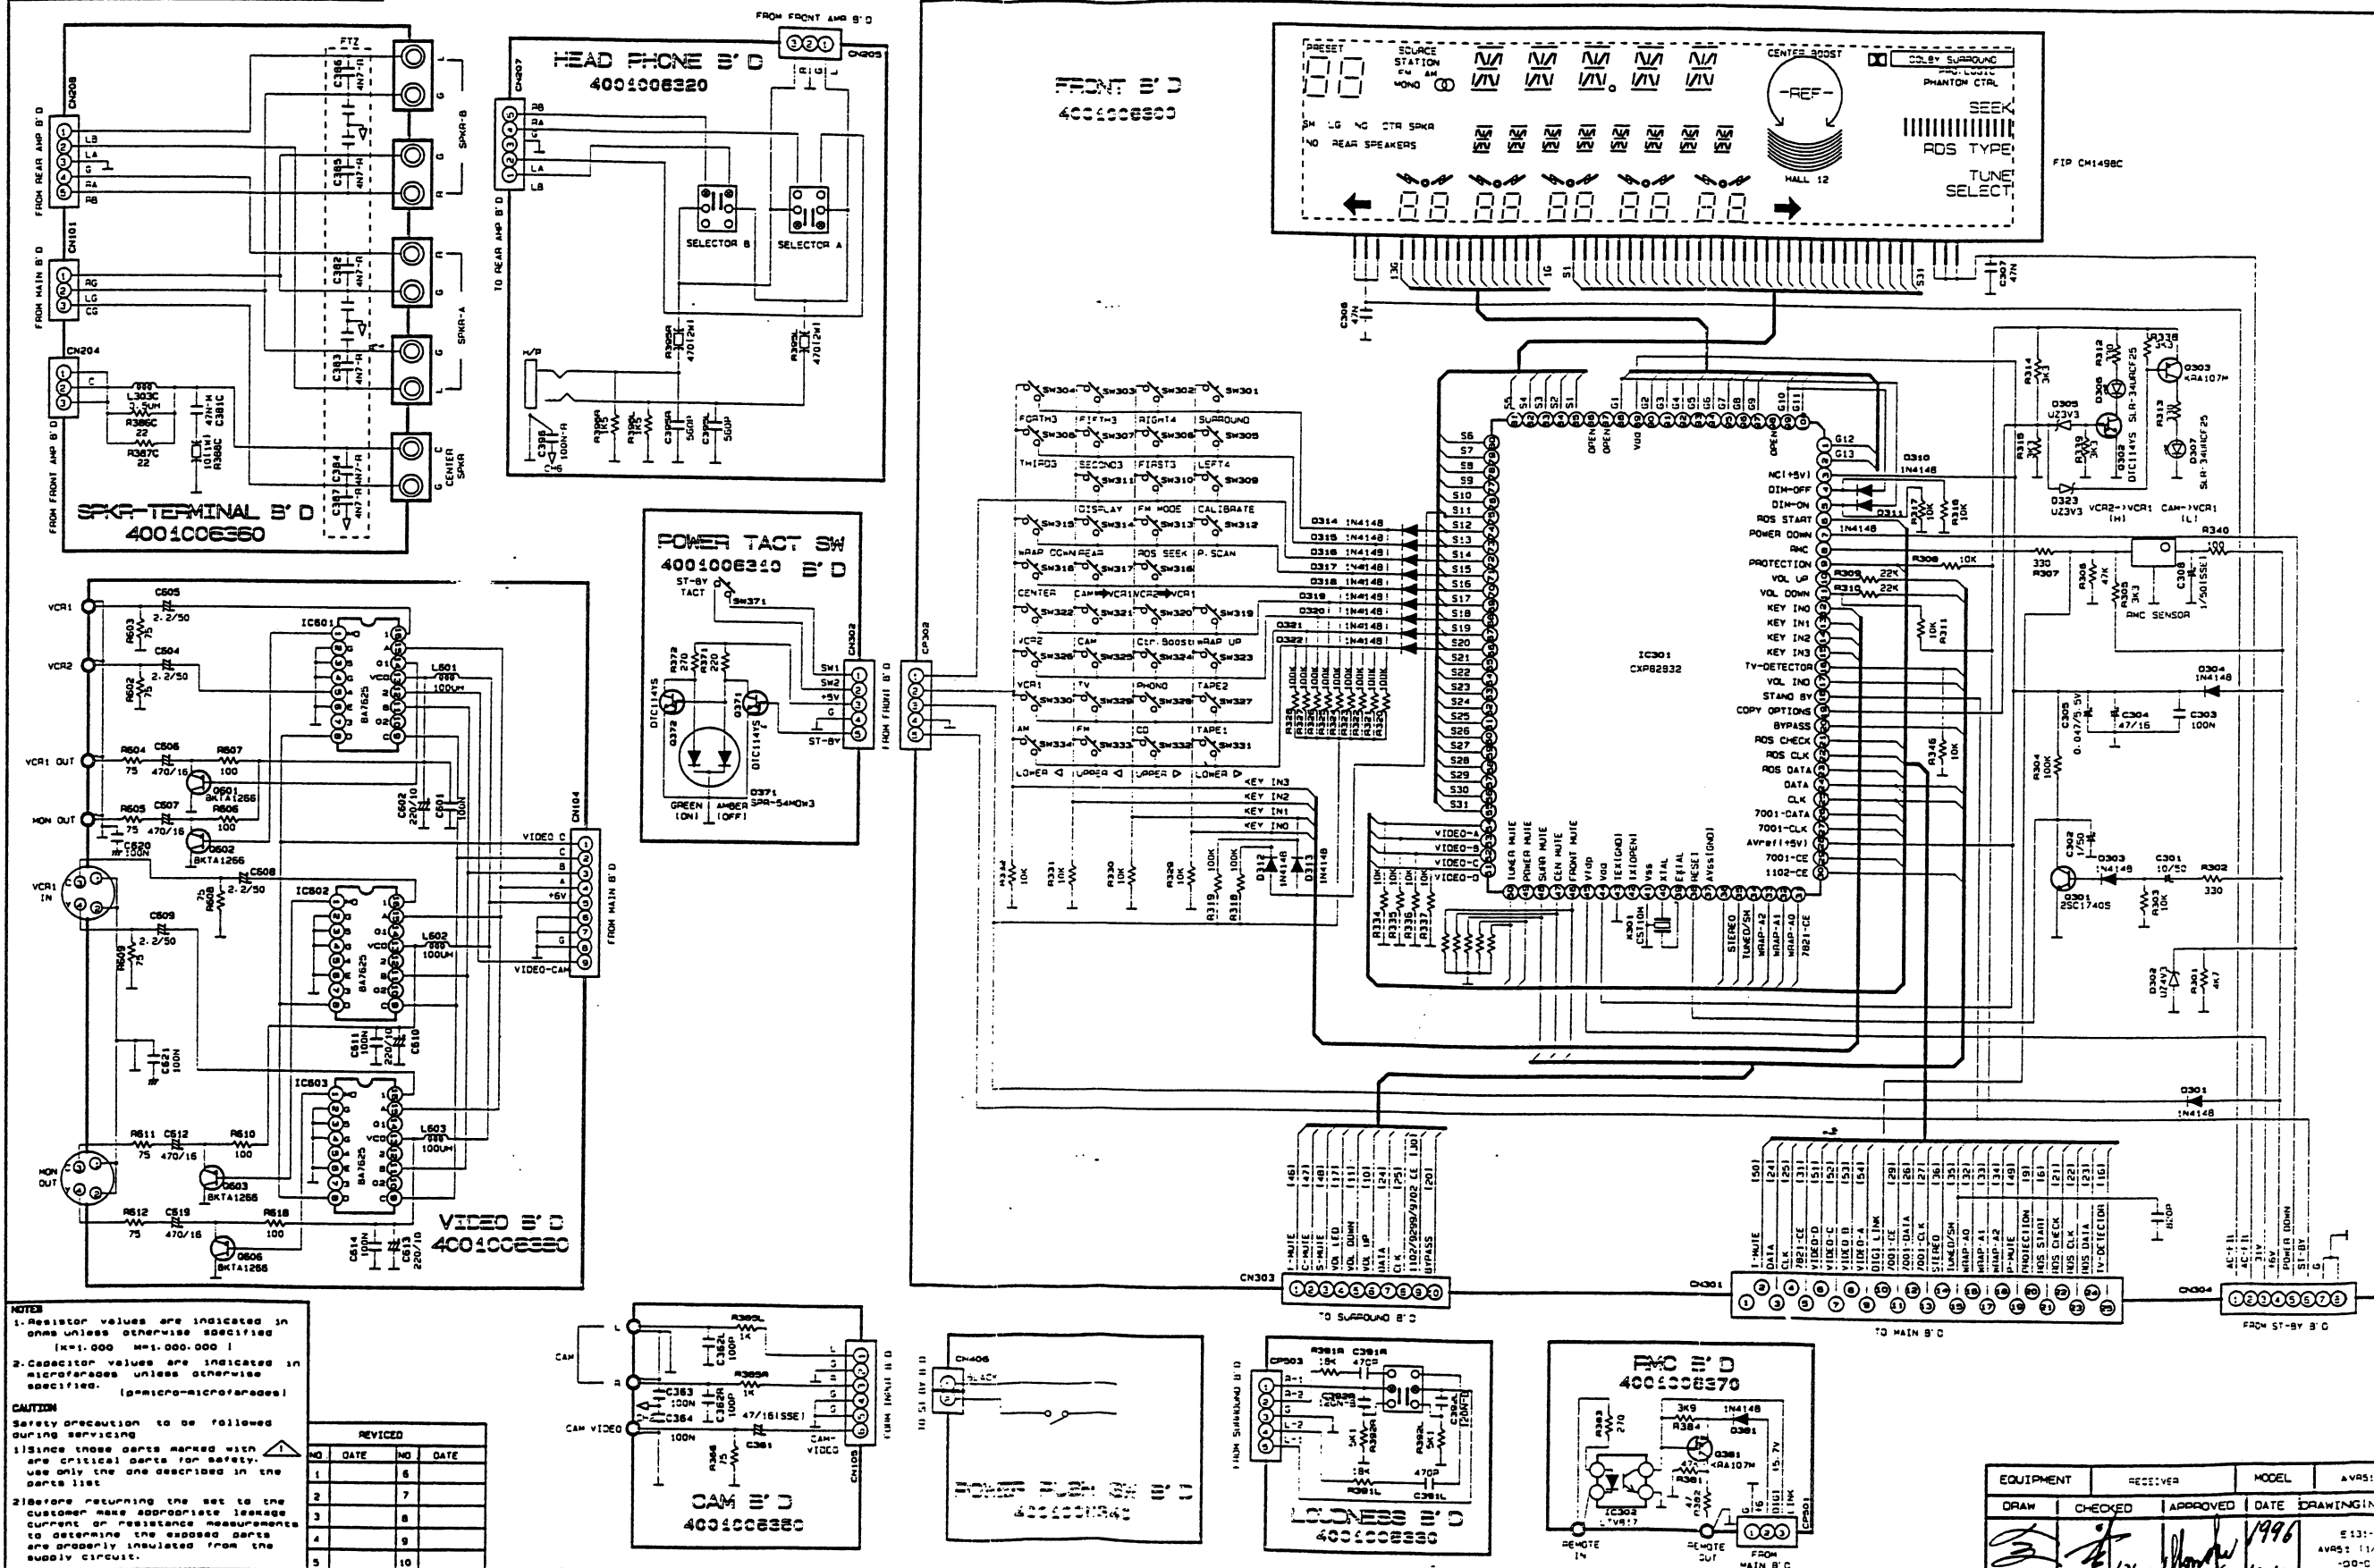

EQUIPMENT	RECEIVER	MODEL	AVR51
DRAW	CHECKED	APPROVED	DATE
12/14	1/14	1/14	1996
			12/14